



DAQIDA | Yiwu Daqida Plastic Products Co., Ltd.

Product Manual of DAQIDA

Magnetic stud finder

B2B Product Specification & Description Manual | DAQIDA

Product Overview

Meet the ultimate tool for DIYers, contractors, and home renovators: our high-performance magnetic stud finder. Unlike bulky electronic gadgets, this streamlined stud ball relies on powerful neodymium magnet stud finder technology combined with a durable Magnet and Rubber body to effortlessly find wall stud with magnet precision. Whether you are hanging heavy TVs, mirrors, or photo frames, this strong magnet for finding studs gets the job done without batteries, guesswork, or noisy beeps.



Key Product Features

No Batteries Required: Operates purely on magnetic physics, ensuring it never runs out of power or needs replacements.

Website: www.daqida.com **WhatsApp / WeChat:** [+86 187 5767 2042](https://wa.me/8618757672042)

Email: sean@daqida.com **Address:** Building 1, No. 47 Longxiang Road, Nansanli, Yiwu City, Zhejiang Province




DAQIDA | Yiwu Daqida Plastic Products Co., Ltd.

Quick and Accurate Detection: Detects screws or nails quickly and accurately behind drywall or wood frame walls.

Direct Targeting & Silent Operation: Provides an immediate physical pull and sticks directly to the fastener without noisy beeps or digital screens.

High Efficiency: Can locate 40 or more steel studs behind 5/8" drywall in less than a minute.

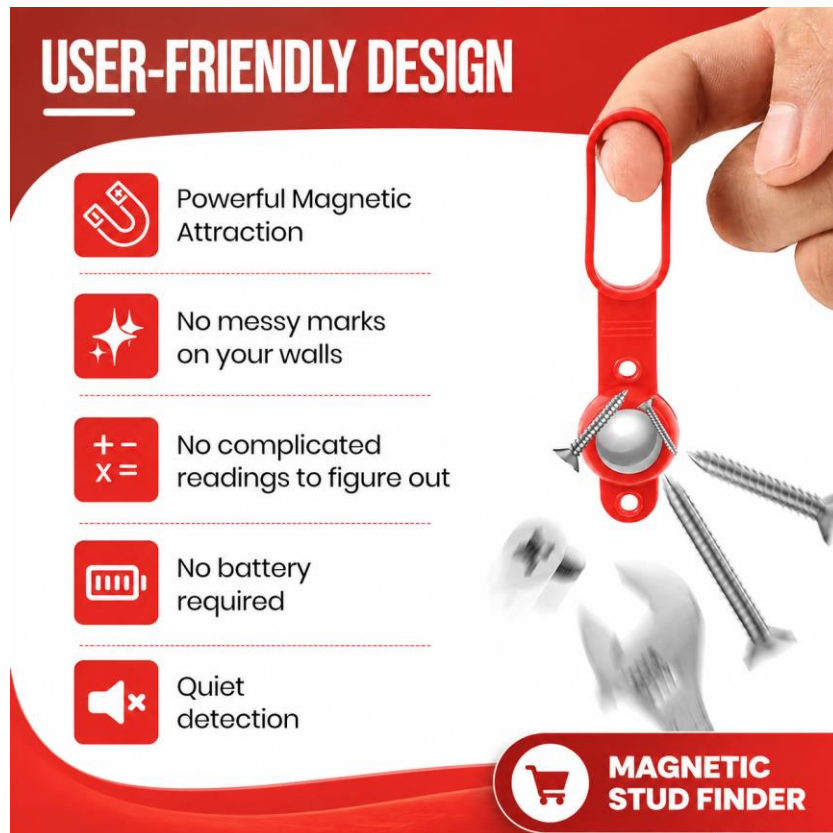

How to Use

Step 1 Sweep: Place the magnet stud finder flat against the wall surface and glide it smoothly back and forth horizontally.

Step 2 Detect: Pay attention to the physical pull; when the internal rare earth magnet stud finder detects a hidden drywall screw or nail head, the unit will pivot and firmly stick to the wall on its own.

Step 3 Drill: The center of the magnet points directly to the fastener, allowing you to proceed safely with your drilling or mounting.

Website: www.daqida.com **WhatsApp / WeChat:** [+86 187 5767 2042](https://wa.me/8618757672042)

Email: sean@daqida.com **Address:** Building 1, No. 47 Longxiang Road, Nansanli, Yiwu City, Zhejiang Province



DAQIDA | Yiwu Daqida Plastic Products Co., Ltd.



Materials & Technical Selection & Engineering

Base Material & Plating: Crafted with precision engineering using high-grade substrates finished with Electroplated Silver, ensuring smooth edges, high durability, and safe, skin-friendly daily contact.

Material Composition: Crafted from premium Magnet and Rubber materials, offering a protective, non-scratch exterior that shields walls while delivering heavy-duty magnetic performance.

Magnetic Power: Features rare earth magnets with a powerful 27-pound pull force, and its high power even allows it to double as a convenient hook for small metal tools.

Deep Penetration: The magnet stud finder tool easily detects metal through up to 5/8" drywall and wood frames, and uniquely works through up to 3/4" ceramic tiling and plywood paneling.

Website: www.daqida.com **WhatsApp / WeChat:** [+86 187 5767 2042](https://wa.me/8618757672042)

Email: sean@daqida.com **Address:** Building 1, No. 47 Longxiang Road, Nansanli, Yiwu City, Zhejiang Province



DAQIDA | Yiwu Daqida Plastic Products Co., Ltd.

MAGNETIC METAL DETECTOR

Stud balls can detect metal through **0.62-inch** gypsum board or other thicker building materials.

01 ◀



Dry Wall

02 ◀



Ceramic tiling

03 ◀



Plywood paneling



Application Scenarios & Use Cases

Home Decor & Renovation: Perfect for securely hanging heavy photo frames, flat-screen TVs, shelving, and large mirrors.

General Construction: Ideal for professionals and homeowners performing drywall installation, repairs, and general building projects.

Multipurpose Utility: Beyond finding studs, it doubles as a handy tool to retrieve small metal objects dropped on the floor or fished out from narrow gaps.

Website: www.daqida.com **WhatsApp / WeChat:** [+86 187 5767 2042](https://wa.me/8618757672042)

Email: sean@daqida.com **Address:** Building 1, No. 47 Longxiang Road, Nansanli, Yiwu City, Zhejiang Province



DAQIDA | Yiwu Daqida Plastic Products Co., Ltd.

MAGNETIC METAL DETECTOR

Stud balls can detect metal through **0.62-inch** gypsum board or other thicker building materials.

01 ◀



Dry Wall

02 ◀



Ceramic tiling

03 ◀



Plywood paneling



Technical Specifications

Product Name	Magnetic Stud Finder
Package Specification	Single Pack
Product Color	Red
Product Size (CM)	8×2.1×1.9cm
Product Package Size (CM)	3×8×8cm
Product Material	Magnet + Rubber
Product Weight (Net)	27.8g
Product Weight with Package (Gross)	41.9g
Packaging Material	White Box

Website: www.daqida.com **WhatsApp / WeChat:** [+86 187 5767 2042](https://wa.me/8618757672042)

Email: sean@daqida.com **Address:** Building 1, No. 47 Longxiang Road, Nansanli, Yiwu City, Zhejiang Province



DAQIDA | Yiwu Daqida Plastic Products Co., Ltd.

Outer Carton Size (CM)	42×42×23cm
Carton Net Weight (KG)	13kg
Carton Gross Weight (KG)	13.65kg
Quantity per Carton (Sets)	400 sets
MOQ for Custom Color (Sets)	/
MOQ for Custom Logo (Sets)	/
Invoicing	1% ordinary VAT invoice / 13% VAT invoice (please inform in advance)

Website: www.daqida.com **WhatsApp / WeChat:** [+86 187 5767 2042](https://wa.me/8618757672042)

Email: sean@daqida.com **Address:** Building 1, No. 47 Longxiang Road, Nansanli, Yiwu City, Zhejiang Province